Keramik-Wasserkocher

10027887

KLARSTEIN

Sehr geehrter Kunde,

Wir gratulieren Ihnen zum Erwerb Ihres Klarstein Gerätes. Lesen Sie die folgenden Anschluss- und Anwendungshinweise sorgfältig durch und befolgen Sie diese, um möglichen technischen Schäden vorzubeugen. Für Schäden, die durch Missachtung der Sicherheitshinweise und unsachgemäßen Gebrauch entstehen, übernehmen wir keine Haftung.

Inhaltsverzeichnis

Technische Daten 2
Sicherheitshinweise 2
Geräteübersicht 3
Vor dem ersten Gebrauch 3
Inbetriebnahme und Benutzung 3
Reinigung und Pflege 4
Hinweise zur Entsorgung 5
Konformitätserklärung 5

Technische Daten

Artikelnummer	**10027887**
Stromversorgung	220-240 V ~ 50-60 Hz
Leistung	1850-2200 W
Fassungsvermögen	1,7 Liter
Temperatur (Umgebung)	> 5°C
Luftfeuchtigkeit (Umgebung)	< 80%

Änderungen der Technischen Daten und des Designs ohne Vorankündigungen, aufgrund von technischen Verbesserungen, bleiben vorbehalten.

Sicherheitshinweise

Lesen Sie sich alle Hinweise sorgfältig durch und bewahren Sie die Bedienungsanleitung zum Nachschlagen gut auf.

- Um Schäden an den Keramikteilen vorzubeugen, tauchen Sie den Stecker, die Bodenplatte und den Kessel nicht in Wasser oder andere Flüssigkeiten.
- Benutzen Sie das Gerät nicht in Badezimmern oder in der Nähe von Wasser.
- Benutzen Sie das Gerät nur in Innenräumen.
- Öffnen Sie nicht den Deckel, solange das Wasser noch kocht.
- Gießen Sie heißes Wasser vorsichtig aus und überfüllen Sie den Kessel nicht.
- Das Wasser bleibt nach dem Erhitzen noch längere Zeit heiß und kann auch dann noch Verbrennungen verursachen. Halten Sie den Kessel, die Bodenplatte und das Netzkabel fern vom Rand der Arbeitsfläche und außerhalb der Reichweite von Kindern.
- Lassen Sie das Netzkabel nicht von der Arbeitsfläche hängen, damit keiner daran zieht oder darüber stolpert. Benutzen Sie das Gerät in Anwesenheit von Kindern nur unter Aufsicht.
- Ziehen Sie den Stecker aus der Steckdose, wenn Sie das Gerät länger nicht benutzen, wenn Sie es umsetzen oder reinigen. Lassen Sie den Kessel vollständig abkühlen, bevor Sie ihn verstauen oder reinigen.
- Versichern Sie sich, dass der Deckel geschlossen ist, bevor Sie den Wasserkocher anschalten. Andernfalls kann es sein, dass der Wasserkocher nicht automatisch ausgeht.
- Versichern Sie sich, dass der Kessel sicher auf der Bodenplatte sitzt, bevor Sie ihn anschalten.
- Versichern Sie sich, dass sich Wasser im Kessel befindet, bevor Sie ihn anschalten. Andernfalls könnten Sie ihn beschädigen.
- Achten Sie darauf, dass das Wasser die maximale Wasserstandanzeige (1.7 Liter) nicht übersteigt.

- Nehmen Sie den Kessel von der Bodenplatte, bevor Sie Wasser einfüllen oder ausgießen.
- Stellen Sie den Kessel, die Bodenplatte oder das Netzkabel nicht auf oder in die Nähe von heißen Oberflächen, Kochplatten oder Öfen.
- Benutzen Sie den Kessel für keinen anderen als den angegebenen Verwendungszweck. Der Kessel dient nur dazu Wasser zu erhitzen. Erhitzen Sie keine anderen Flüssigkeiten darin.
- Benutzen Sie den Kessel nur mit der mitgelieferten Bodenplatte.
- Benutzen Sie den Wasserkocher nicht, wenn das Netzkabel oder der Stecker beschädigt sind, oder das Gerät eine Funktionsstörung aufweist. Falls Netzkabel oder Stecker beschädigt sind, lassen Sie die Teile von einem qualifizierten Fachbetrieb ersetzen.
- Achten Sie darauf, dass der Deckel geschlossen ist, bevor Sie den Wasserkocher anschalten.

Geräteübersicht

1 Ausguss
2 Deckel
3 Drucktaste
4 Griff
5 AN/AUS-Schalter
6 Wasserstandanzeige
7 Bodenplatte
8 Betriebsanzeige
9 Netzkabel

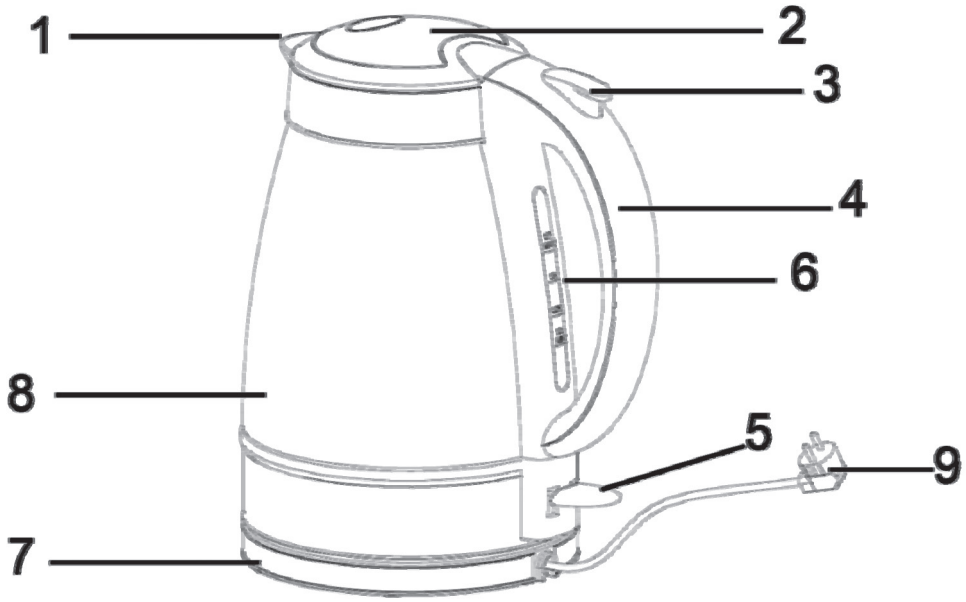

Vor dem ersten Gebrauch

Entfernen Sie alle Verpackungsmaterialien. Wenn Sie den Kessel das erste Mal benutzen oder ihn lange nicht benutzt haben, befüllen Sie ihn bis zur max. Markierung mit Wasser. Bringen Sie das Wasser zum Kochen und gießen Sie es aus. Spülen Sie den Kessel danach mit kaltem Wasser aus.

Inbetriebnahme und Benutzung

Stellen Sie die Bodenplatte in der Nähe einer Steckdose auf. Verlegen Sie das Netzkabel so, dass es nicht von der Arbeitsfläche hängt und niemand aus Versehen daran hängen bleibt. Sie können das Kabel verkürzen, indem Sie es unterhalb der Bodenplatte aufwickeln. Damit die Bodenplatte eben steht, lassen Sie das Kabel aus dem Schlitz in der Bodenplatte laufen.

Deckel öffnen

- Nehmen Sie den Kessel von der Bodenplatte. Falls Sie dabei unbeabsichtigt auf den AN-Schalter gekommen sind, springt er automatisch wieder in die AUS-Position zurück.
- Sobald das Wasser kocht, halten Sie den Griff mit einer Hand fest und öffnen Sie den Deckel mit der Drucktaste. Sobald sich der Deckel löst, nehmen Sie den Kessel aus dem Dampf.

VORSICHT
Verbrennungsgefahr! Nach dem Kochen tritt heißer Dampf aus, sobald der Deckel geöffnet wird. Öffnen Sie den Deckel so, dass der Ausguss von Ihnen weg zeigt.

Kessel befüllen

- Öffnen Sie den Deckel mit der Drucktaste.
- Füllen Sie so viel Wasser ein, dass der minimale und maximale Wasserstand nicht unter- bzw. überschritten wird.
- Überfüllen Sie den Kessel nicht, sonst besteht die Gefahr, dass kochendes Wasser herausspritzt.
- Drücken Sie den Deckel herunter und achten Sie darauf, dass er fest geschlossen ist. Andernfalls kann es sein, dass der Kessel nach dem Kochen nicht automatisch ausgeht.

Wasserkocher einschalten

- Achten Sie darauf, dass der AN/AUS-Schalter auf AUS steht (heben Sie den Kessel kurz an und setzen Sie ihn wieder auf die Bodenplatte).
- Stecken Sie den Stecker in die Steckdose. Falls nötig, schalten Sie die Steckdose ein. Setzen Sie den Kessel auf die Bodenplatte und achten Sie darauf, dass Sie dabei kein Wasser verschütten.
- Drücken Sie den Schalter herunter. Der Schalter beginnt zu leuchten und der Wasserkocher heizt sich auf.
- Nachdem das Wasser kocht, geht der Wasserkocher automatisch aus. Der Schalter springt automatisch in die AUS-Position, das Licht erlischt.

Wasserkocher ausschalten

Falls Sie den Wasserkocher während des Betriebs ausschalten möchten, heben Sie ihn einfach hoch und setzen Sie ihn dann wieder auf die Bodenplatte. Der Schalter springt dadurch automatisch in die AUS-Position zurück.

Allgemeine Hinweise zur Benutzung

- Überfüllen Sie den Kessel nicht, damit beim Kochen kein Wasser aus dem Ausguss spritzt.
- Schalten Sie den Kessel nur ein, wenn sich genug Wasser darin befindet. Falls sich zu wenig Wasser im Kessel befindet, schaltet er sich automatisch aus. Warten Sie in diesem Fall bis der Kessel vollständig abgekühlt ist, bevor Sie ihn befüllen. Andernfalls könnte Ihnen das Wasser entgegenspritzen, da das Heizelement sehr heiß ist.

Reinigung und Pflege

Kessel reinigen

- Schalten sie den Wasserkocher aus, indem Sie ihn von der Bodenplatte heben. Ziehen Sie den Stecker aus der Steckdose und lassen Sie den Kessel vollständig abkühlen, bevor Sie ihn reinigen.
- Wischen Sie die Außen- und Innenseite des Kessels mit einem feuchten Lappen ab. Falls nötig verwenden Sie zusätzlich etwas Spülmittel. Mehr zur Filterreinigung erfahren Sie unter „Wasserfilter reinigen". Falls sie die Innenseite des Kessels mit Spülmittel reinigen spülen Sie den Kessel hinterher sorgfältig mit klarem Wasser aus.
- Achten Sie darauf, dass alle Anschlüsse und Kabel trocken bleiben.
- Benutzen Sie zur Reinigung keine scharfen chemischen Reiniger, Scheuermittel oder Lösemittel.

Kessel entkalken

Kalkablagerungen führen dazu, dass sich das Heizelement überhitzt und reduzieren damit die Produktlebensdauer. Kalkablagerungen können auch dazu führen, dass der Sicherheitsschalter den Kessel vorzeitig ausschaltet, bevor das Wasser kocht. Um die Ablagerungen auf ein Minimum zu beschränken befolgen Sie folgende Schritte:

- Entleeren Sie den Kessel nach jedem Gebrauch komplett, lassen Sie kein Wasser darin stehen.
- Benutzen Sie gefiltertes Wasser anstelle von normalem, kalkhaltigem Leitungswasser.

- Entkalken Sie den Kessel regelmäßig mit einem Entkalker, der für Produkte mit Plastikgehäuse geeignet ist. Falls Ihr Wasser sehr hart ist, entkalken Sie den Kessel mindestens einmal im Monat.
- Halten Sie sich beim Entkalken genau die Anweisungen auf der Verpackung des Entkalkers. Sobald Sie mit dem Entkalken fertig sind, entleeren Sie das Wasser und spülen Sie den Kessel mehrmals mit klarem Wasser aus. Füllen Sie dann frisches Wasser ein, erhitzen Sie es und entleeren Sie es anschließend. So verhindern Sie, dass sich möglicherweise noch Entkalker-Rückstände im Kessel befinden.

HINWEIS: Befolgen Sie die Hinweise zur Entkalkung genau. Schäden, die auf Verkalkung zurückzuführen sind, können zu Garantieverlust führen.

Wasserfilter reinigen

- Der Wasserfilter filtert die Kalkpartikel aus dem Wasser. Reinigen Sie den Wasserfilter regelmäßig, damit er effektiv filtern kann und sich das Wasser im Kessel nicht durch Kalkpartikel trübt.
- Reinigen Sie den Filter sobald sich Rückstände erkennen lassen oder wenn Sie Probleme beim Ausgießen haben.

Hinweise zur Entsorgung

Befindet sich die linke Abbildung (durchgestrichene Mülltonne auf Rädern) auf dem Produkt, gilt die Europäische Richtlinie 2002/96/EG. Diese Produkte dürfen nicht mit dem normalen Hausmüll entsorgt werden. Informieren Sie sich über die örtlichen Regelungen zur getrennten Sammlung elektrischer und elektronischer Gerätschaften. Richten Sie sich nach den örtlichen Regelungen und entsorgen Sie Altgeräte nicht über den Hausmüll. Durch die regelkonforme Entsorgung der Altgeräte werden Umwelt und die Gesundheit ihrer Mitmenschen vor möglichen negativen Konsequenzen geschützt. Materialrecycling hilft, den Verbrauch von Rohstoffen zu verringern.

Konformitätserklärung

Hersteller: CHAL-TEC Vertriebs- + Handels GmbH, Wallstraße 16, 10179 Berlin.

CE

Dieses Produkt entspricht den folgenden Europäischen Richtlinien:
2004/108/EG (EMV)
2011/65/EU (RoHS)
2006/95/EG (LVD)

Dear Customer,

Congratulations on purchasing this Klarstein equipment. Please read this manual carefully and take care of the following hints on installation and use to avoid technical damages. Any failure caused by ignoring the mentioned items and cautions mentioned in the operation and installation instructions are not covered by our warranty and any liability.

Contents

Technical Data 6
Safety Instructions 6
Product Description 7
Use and Operation 7
Use and Operation 7
Cleaning and Care 8
Environment Concerns 9
Declaration of Conformity 9

Technical Data

Item number	**10027887**
Rated voltage	220-240 V ~ 50-60 Hz
Power	1850-2200 W
Capacity	1.7 Litres
Temperature (environment)	> 5°C
Humidity (environment)	< 80%

As the manufacturer is constantly working on improvement of its products, the design and technical specifications are subject to change without prior notice.

Safety Instructions

Read all the safety and operating instructions carefully and retain them for future reference.

- To protect against ceramical hazards do not immerse the mains plug, power base, or kettle in water or any other liquid.
- Do not use in the bathroom or near any source of water. Do not use outdoors.
- Do not touch hot surfaces. Use handles or knobs.
- Do not open the lid while the water is boiling.
- Take care when pouring pour slowly, and do not overfill the kettle.
- Water can remain hot for a considerable time after boiling and can present a scald hazard. Keep the kettle, the power base, and the mains lead away from the edge of worktops and out of the reach of children.
- Do not allow the mains lead to hang over the edge ot the table or worktop, or any where it may be accidentally caught or tripped over.
- Close supervision is necessary when any appliance is used near children.
- Unplug the power base from the wall socket when not in use, before repositioning and before cleaning. Allow the kettle to cool down fully before cleaning and before storing away.
- Ensure that the lid is closed before switching the kettle on, otherwise it may not switch off.
- Check that the kettle is properly located on the power base before switching it on.
- Do not switch on unless the kettle contains at least 1 cupful of water, otherwise you may damage it.
- Do not fill above the bottom of the max mark on the water level indicator (1.7 Liter)

- Remove the kettle from its power base before filling or pouring.
- Do not place the kettle, power base or mains lead on or near any hot surface, hotplate, hot hob or burner.
- Do not use the kettle for any purpose other than heating water.
- Use the kettle only with power base supplied (and vice versa)
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions. Or has been damaged in an manner. If the mains lead is damaged, it must be replaced be a special lead available from the Service department
- Ensure that the lid is closed before switch

Product Description

1 Spout
2 Lid
3 Push Button of Lid
4 Handle
5 ON/OFF Switch
6 Water level Indicator
7 Cordless Power Base
8 Power Indicator
9 Power Cord

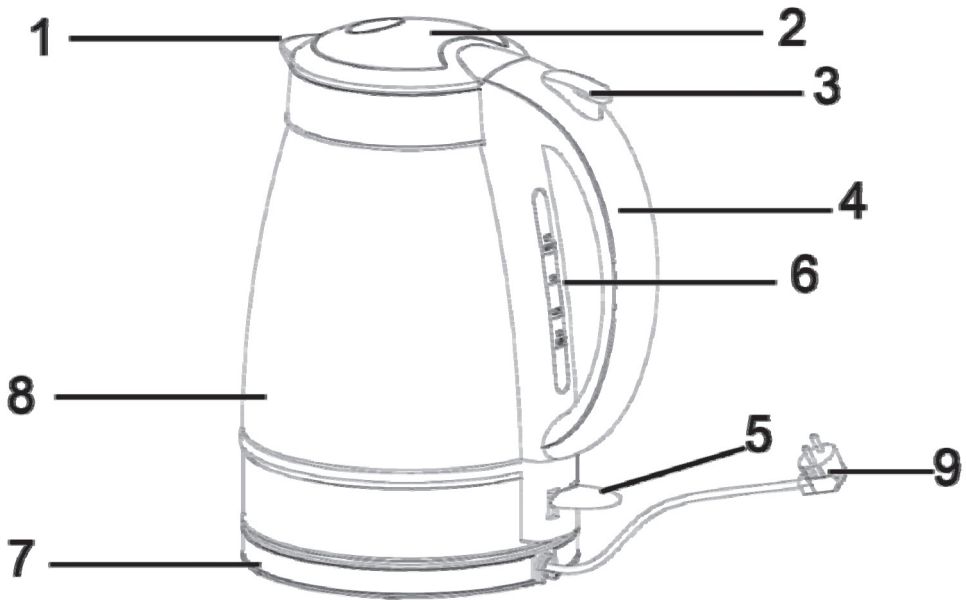

Before first Use

Remove all packaging from the kettle and its power base. Before using the kettle for the first´time,or if it has been out of use for a long time, fill to the max mark and boil, then discard the boiled water and rinse the kettle out with cold water.

Use and Operation

Position the power base as close to a wall socket as possible. Route the mains lead so that it dose not overhang the work surface,and cannot be caught accidentally.Shorten the mains lead by winding it round the cord storage area under the power base,and bring it out of the cord exit cut into the base.

Opening the lid

- Remove the kettle from the power base (9).
- If the switch (7) has been pushed down inadvertently, it will spring up, into the <OFF> position.

CAUTION
Risk of burns! If the kettle has just boiled, it will be full of steam,which will escape as soon as the lid is opened. Hold the handle firmly in one hand, grip the lid knob in the other, and pull the lid straight up. As soon as it separates from the kettle, move it out of the steam.

Filling

- Open the lid and fill the kettle via the lid aperture.
- Watch the level in the water level indicator. The water level must be below the max mark.
- Do not overfill the kettle. If the kettle is overfilled, there is a risk that boiling water may be ejected.
- Replace the lid and press it down. Check that it is fully closed; otherwise the kettle may not switch off when it boils.

Switching on

- Check that the switch is in the "OFF" position (lifts the kettle from the power base and set it down again).
- Plug the power base into the wall socket. If necessary, switch the socket on. Gently position the kettle on the power base, taking care not to spill any water.
- Press the switch down. The switch will light up, and the kettle will start to heat up.
- When the water has boiled the kettle will switch off automatically, the switch will return to the "OFF" position and the light will go out.

Switching off

If you need to switch the kettle off at any time before the water boils, simply lift it front the power base and set it down again. The switch will pop up, into the "OFF" position

General Hints on Use

- When you lift the kettle from the base, you may see moisture on the surface of the base. This is the steam used to switch the kettle off automatically, which then condenses and is allowed to escape via vents in the underside of the kettle, do not lift it backwards, as this may allow water to pass through the steam aperture on to the control area. Should this occur, the kettle **must** be allowed to dry before use.
- To avoid the risk of splashing, pour slowly and do not over-tilt the kettle.
- Do not switch the kettle on unless it contains at least one cup of water. Misuse of this kind will shorten the life of the element.
- If the kettle is accidentally switched on when it does not contain sufficient water, a boil-dry device will automatically switch it off. Wait until the kettle has cooled down before filling, as the element will be hot and spitting may occur

Cleaning and Care

Cleaning

- Switch the kettle off (lift it from the power base), unplug the power base from the wall socket and let the kettle cool down completely before cleaning.
- Wash the outside and inside surfaces of the kettle with a damp cloth. If necessary, you may use a little household detergent. To clean the filter, see "Water filter" below. If you use detergent inside the kettle, rinse thoroughly afterwards to remove all trace if the detergent.
- Ensure that all connectors and sockets are kept dry. Do not immerse the kettle or power base in water or any other liquid. Do not use harsh or abrasive cleaners or solvents.

Decaling

Scale build-up will cause the element to overheat, reducing its working life. It may also cause the safety cut out to operate prematurely, switching the kettle off before the water boils As the element is mounted beneath the kettle, there are no awkward nooks and crannies for the scale to get a foothold. It can build up only on the walls and floor of the kettle, where it can be seen and dealt with. To minimize scale build-up:

- Empty the kettle after each use; do not allow water to stand in the kettle overnight; use filtered water instead of ordinary tap water.

- Descale the kettle regularly using a proprietary brand of descaler suitable for use in plastic-bodied products. In areas of very hard water descaling may be necessary as often as once a month.
- When decaling, follow the instructions on the packet of descaler. When descaling has finished, empty the kettle and rinse it out several times with fresh water, then fill with fresh water, boil. And discard the water. This should ensure the no chemical residues are left in the kettle.

NOTE: Products returned during the guarantee period with faults that are directly related to scale built-up will be subject to a repair charge.

Water filter

- The scale particles that remain suspended in the water may give it a cloudy or greasy appearance, depending on the hardness of the water. The filter fitted to your kettle will prevent these parties passing into your drink.
- You must ensure that the filter is kept clean and clear of deposits otherwise the performance of your kettle may be adversely affected, your drinks may contain scale particles, and the water inside the kettle may look cloudy.
- You should clean the filter whenever there are any noticeable deposits left on it, and especially if pouring is affected in any way.

Environment Concerns

According to the European waste regulation 2002/96/EG this symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailled information about recycling of this product, please contact your local council or your household waste disposial service.

Declaration of Conformity

Producer: CHAL-TEC Vertriebs- + Handels GmbH, Wallstraße 16, 10179 Berlin.

CE

This product is conform to the following European Directives:
2004/108/EC (EMC)
2011/65/EU (RoHS)
2006/95/EC (LVD)